

Hamburger mini speaker

ZA-550

User's Guide

www.zartek.co.za

1

INTRODUCTION

Please take a few moments to read through this manual to gain important information about using the Zartek Hamburger mini speaker.

This **portable speaker** has a compact casing with an innovative opening and closing design that provides **extra bass resonance**. When closed treble sounds will be enhanced and when open bass sounds are enhanced. Its **palm size** is convenient for carrying and outdoor use.

With the latest technology **built-in rechargeable Li-ion battery**, the speaker greatly amplifies sound. A **high fidelity speaker** gives crystal clear audio.

The speaker is equipped with a **standard audio jack** to connect to many devices such as a PC, laptop, iPod, MP3 and MP4 player, PSP, portable DVD player and mobile phone provided they have a standard 3.5mm audio output socket (such as those used for earphones).

Charge the speaker by connecting the **USB** cable to any USB port on a PC, laptop or DC charger. The **high capacity** battery allows for long play time even at loud volumes.

Zartek Hamburger mini speaker lets you to appreciate music from your audio devices simply without requiring extra wires for power. Share your music with those around you wherever you are: at home, on outings or even while you walk.

2


INCLUDED ITEMS

- ① Zartek Hamburger mini speaker
- ② USB charging/audio data retractable cable
- ③ User guide

RUNTIME

- The battery discharge time will depend on the play volume.
- Typical runtime values for medium volume are approximately 8 hours and for loud volume 2 hours.


Cable functional diagram and description

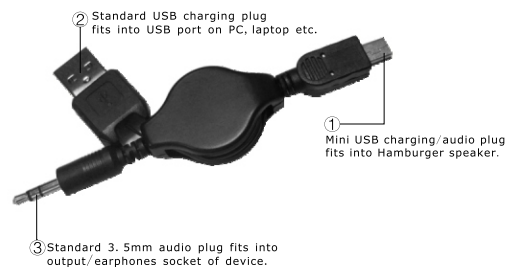

- Pictures in this manual may differ from actual product in shape and color.

3

Speaker functional diagram and description

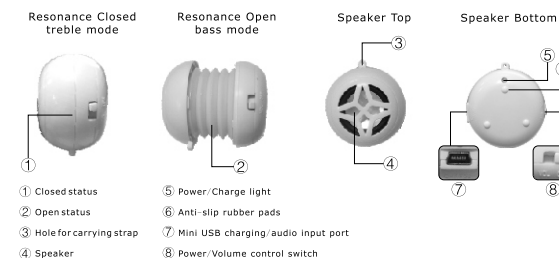

INSTRUCTIONS FOR CONNECTING SPEAKER

- Extend the retractable cable by pulling apart both sides of the cable gently. **Always pull both the audio and USB plugs (on the same side) together to avoid tangling.**
- Lock the length by releasing the cables after a slight click is heard to indicate a locking position.
- Release the cable by pulling both cables slightly and closing slowly.
- Connect the mini USB plug ① to the input port on the speaker ②.
- Connect the standard 3.5mm audio Jack ③ to the speaker output / earphones socket on devices such as computers, laptops, MP3 players and many other devices provided they are equipped with a standard audio socket.
- Power the speaker on and select low or high volume.

INSTRUCTIONS FOR CHARGING THE SPEAKER

- Connect the USB plug ④ to a USB port on computers, laptops and other USB charging port on AC/DC adaptors and chargers.
- The speaker has a built-in rechargeable Lithium ion battery pack of 300mAh. Battery charging time from AC/DC 5V charger is approximately 2.5 hours and from a USB port is 4 hours.

4

OPENING AND CLOSING



- Step 1**
- Hold the top and bottom hemisphere with all fingers of the right and left hands respectively. Align each hemisphere until the mini USB port and fitting arrows are in line with each other.



- Step 2**
- Press each side of the speaker together gently.



- Step 3**
- Line up the raised markers as indicated by the fit arrow.



- Step 4**
- To close the case, hold the left hemisphere firmly and tilt the right half upwards (in a clockwise direction) as indicated in the fitting diagram on the speaker (lock arrow). To open, tilt the right half downwards (in an anti-clockwise direction) as indicated in the fitting diagram on the speaker (unlock arrow).

5

TECHNICAL SPECIFICATIONS

Model: ZA-550
 Power output: 2.2W
 Speaker: D(36mm)
 SNR ≥ 89dB
 Lithium ion battery voltage: 3.7V
 Lithium ion battery input voltage: 5V
 Charge voltage: 4.2V
 Battery capacity: 300mAh
 Dimensions: D(52mm) x H(≈35-64mm)
 Operating temperature: 0C-40C
 Net weight: 50g
 Charge time: 2.5 hours (DC5V), 4 hours (USB)
 Runtime: 8 hours (medium volume), 2 hours (loud volume)
 Battery lifecycle: 300-500 times

⚠ WARNINGS

Charge and operate only as indicated in this manual as improper use may result in damage to the product or injury. Do not exceed the volume of the speaker as it may cause permanent damage. Do not expose this product to damp, wet or high temperature areas. Do not short out this product or disassemble by yourself to avoid danger or shocks. Do not insert any objects into the sound box. Keep out of reach of children and maintain supervision if young children are using. Avoid over-extending the speaker and cable. Do not pull the speaker and cable with force.



For enquiries email us at info@zartek.co.za

6